




 




Smart stuff



Turn on the device: Press and hold  to turn the phone on. Press  to turn on just the organizer (no phone or Internet, perfect when on a plane). Use this to return to your last state too.

 
Screen brightness: To adjust the brightness on your screen, press  + . Use  and  on the 5-way navigator to brighten or tone down the screen.

Application menus: Press  to open the menus. Use the 5-way navigator to move between menus and select menu items.





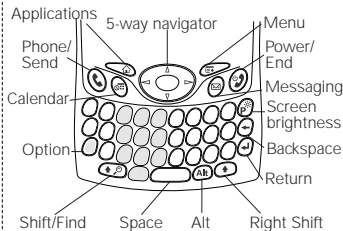

 
Silence the ringer: Slide the ringer switch to the  position.

Open applications: Press . Use the 5-way to highlight an application, and then press Center.

Keyguard: Keyguard disables all buttons and the screen's touch-sensitive feature to prevent accidental calls. Press  +  to turn Keyguard on. Press Center to dismiss.





How to type...


Capital letters	 + letter or  + letter
Caps Lock	Press  or  twice. Press again to turn off.
Numbers & symbols	 + key
Option Lock	Press  twice, again to turn off
Extra symbols	Key +  (choose from list)

Tips & shortcuts in your pocket

Take the Quick Tour:

Press . Select  and pick from the list of helpful topics.

Battery info: Tap the onscreen battery icon to see how much power you have left.

Multi-task: You can use other applications while talking on the phone. Press  to return to the Phone application.

Bluetooth: Tap the onscreen Bluetooth icon to turn Bluetooth on and off and to set up devices.

 Phone/Send

 Calendar

 Applications

 5-way navigator

 Menu

 Messaging

 Power/End

 Option

 Alt


 Backspace

 Return

 Shift/Find

 Right Shift

Making calls


Turn on the phone: Press and hold  to turn the phone on.



With the Dial Pad: Press .

Use the keyboard to type a number or tap numbers on the onscreen Dial Pad.



Press  to dial.

To create speed dial favorites:


Press . Use the 5-way navigator to highlight a favorite button and press Center to dial.

By name: Press . Press Center to open Contacts. Begin typing a first or last name or a first initial and last name to search in your Contacts. Choose a number from the results and press .

Redial: Press  three times.



Call Log: Press  twice. Then select Call Log from the recent call list. All recent incoming and outgoing calls are listed in chronological order. Select a number, and then press  to dial.

To create speed dial favorites:

Press , and then use the 5-way navigator to highlight a blank favorite. Press Center, and enter the info.


- Select Lookup to grab info from your Contacts list.
- Select More to enter Extra Digits such as passwords or extensions - digits can be set to see a list of all numbers associated with that contact.

Customize the Main View:

Press , and then . Select Options, and then select General Preferences. You can:

- Display an image as wallpaper rather than the Dial Pad.
- Select whether typing on the keyboard opens Contacts or dials numbers.
- Select whether Calendar events appear.
- Show one or two rows of favorite buttons.

Menu items: Most menu commands have keyboard shortcuts listed beside them.

Press  + shortcut letter for instant access.

Expand: Use expansion cards to expand storage space on your device. Your Treo accepts SD, SDIO, and MultiMediaCard expansion cards.

Add apps: Download compatible Palm OS® applications directly from the Internet using the built-in web browser. Highlight the download link and press Center to get the application.

Beware of magnet: The speaker on your device uses a magnet, so don't keep it near credit cards or other items sensitive to magnets.

Visit www.palmOne.com for the latest accessories.

palmOne™

© 2004 palmOne, Inc. All rights reserved. palmOne, Treo, Palm OS are among the trademarks or registered trademarks owned by or licensed to palmOne, Inc. All other brand and product names are or may be trademarks of, and are used to identify products or services of, their respective owners. 406-10224-00